





PXN-9613



WIRELESS CONTROLLER User Manual

●Product Overview

Thank you for choosing PXN' s product and supporting our brand. Please read the manual carefully before using.

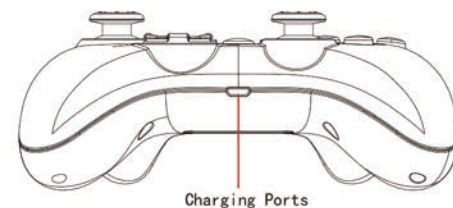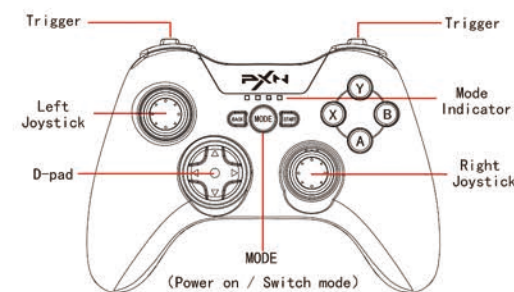

1

●Functional features:

1. Connected by Bluetooth and 2.4Ghz wireless , applicable to a distance of 7 meters.
2. Android standard gamepad key value , support Android versions 4.0 and above.
3. PC computer support X-Input/D-Input dual model, Games for windows can plug & play. Meeting different game needs.
4. Double built-in vibrating motors in the gamepad bring you more real true game experience.
5. Built-in high efficient lithium battery and smart power saving technology. Playing longer.
6. Human body engineering design, precision simulation double joysticks, D-pad and Linear trigger.

●System requirement

1. Support Platform : Android phone/TV/ STB(Set Top Box)/pad and PC.
2. Support System : Android devices (above 4.0 version) , Microsoft Windows XP/VISTA/7/8/10.

●Android Platform

Bluetooth Connection Method

1. Open the Bluetooth on Android device, turn on the search function.

2

2. Connect with 'PXN-9613' on the Bluetooth management interface of the Android device.
3. When LED1 indicator light keeps on, the gamepad connects successfully.

2.4G Wireless Connection Method

1. Plug in the USB wireless receiver to the USB port of your Android device.
 2. Press A button and then MODE button for 1 second to start the gamepad. The LED1 indicator light flashes.
 3. When LED1 indicator light keeps on, the gamepad connects successfully.
- PS: With Bluetooth function device, when plug in the USB wireless receiver, the gamepad will priority connect with 2.4G Wireless connection method.

Mouse Simulation Mode

1. Mouse simulation mode can enable the gamepad to work as mouse.
2. The left joystick simulates mouse move, the right joystick simulates mouse scroll function, LB button simulates the left mouse button, RB button simulates the right mouse button.
3. Enter mouse mode: On Android mode, press right joystick for 3 seconds.
4. Exit mouse mode: Press right joystick for 3 seconds to exit mouse mode.

3

●PC Platform (2.4G Wireless Connection)

1. Open PXN official website (www.e-pxn.com.cn) to download drive and install. The specific path is: PXN official website---Service and Support--- Relevant Download---Gamepad Category.
2. Download " PXN-9613" drive, unzip to install according to the instructions.
3. Plug in the USB wireless receiver to the USB port of your PC computer device. The computer will prompted found a new hardware and complete windows the driver installation.

●X-Input Mode

1. Press X button and then MODE button for 1 second to start the gamepad. The LED2 indicator light flashes.
2. When LED2 indicator light keeps on, the gamepad connects successfully.

●D-Input Mode

1. Press B button and then MODE button for 1 second to start the gamepad. The LED3 indicator light flashes.

4

2. When LED3 indicator light keeps on, the gamepad connects successfully.
3. D-Input Mode default setting is PC Imitation Mode. Press MODE button switch to PC Digital Mode (The LED4 indicator light keeps on) . Press MODE button switch back to PC Imitation Mode.

●Gamepad Inspection

1. It can go through function self-inspection by unfolding computer game controller under PC computer use. The specific methods are as below:
2. XP system, unfold control panel--- game controller, click attribute testing.
3. WIN7 system above, unfold control panel---device and printer---right-hand button click gamepad icon ---game controller set, click attribute testing.

●Power On/Off

Power On : Press MODE button 1 second to start.
Power Off : Long press MODE button 3 seconds to power off.

●Mode Switch

1. When the gamepad power off , Press MODE+A or B or X to select mode. If you want switch other mode, the gamepad should turn off.

5

Working Modes	Switch the key combination	指示灯
Android Mode	Press A+MODE Button , Power on	LED1
X-Input Mode	Press X+MODE Button , Power on	LED2
PC Imitation Mode	Press B+MODE Button , Power on	LED3
PC Digital Mode	Under PC Imitation Mode , press MODE button switch to PC Digital Mode	LED4

2. Next time play with the gamepad, just press MODE button turn on. The gamepad will automatic defaults the mode of last time.

●Charging Function

1. Charging under without working state, four LED light flash at the same time, the LED lights died out when full charged.
2. Charging under working state, the indicating LED light of present mode blinks, it will keep on when full charged.
3. Charging Power: standard USB 5V voltage, charging current less than 300MA, it takes 3-4 hours before full charged.
4. Low batter warning: When the gamepad battery is less than 3.2V(±0.3), all indicating light blinks prompt, please re-charge timely.

6

●Sleeping Function

1. The gamepad enters sleep state after 1 minute disconnection.
2. The gamepad enters sleep state after 5 minute no action.
3. Under sleeping state, press MODE button will connect the mode by last time.

●Reset Function

When the gamepad occurs to functional disorder, dead halt or other abnormalities, it can be reset power-off by pressing the switch in the reset slot on the back of the gamepad and press the MODE key to restart connecting.

●Attentions

1. Avoid fierce vibration. Don't take apart, revise and mend by yourself.
2. Don' t let water or other liquid entering inside of the gamepad to make any damages.
3. Don' t store in places of high humidity, temperature, heavy oil or smoke.
4. Don' t drop the gamepad into fire or explosion danger may be caused by built-in battery.
5. Children should be under the custody of adults to use this product.

7

●Product Specifications

Product Mode	PXN-9613
Connection Pattern	Bluetooth/2.4Gwireless
Working Power	Built-in 550mAh lithium battery
Working Current	Normal state less than 20mA; vibrating state less than 100mA
Packing Dimension	13.5*7.0*18.0CM
Dimension	15.3*11.1*6.1CM
Weight	About 210gram
Application Temperature	10-40°C
Application Humidity	20~80%

8